

# Installation Instructions

---

## **LTC Power Module**

*LTC* Power Modules must only be used in conjunction with the *LTC* Outer Cabinet.

The installation and removal instructions are contained within the *LTC* Outer Cabinet installation instructions ( stock number 73-369-00 ) supplied with the outer cabinet.

Zero 88 Lighting Ltd. reserves the right to make changes to the equipment described in this manual without prior notice.

This equipment is designed for professional stage lighting control, and is unsuitable for any other purpose. It should be used by, or under the supervision of, appropriately qualified or trained persons only.

E&OE

© Zero 88 Lighting Ltd. 1994

### **Zero 88 Lighting Ltd.**

#### **Sales & Spares**

46 Hart Rd,  
St. Albans,  
AL1 1NA,  
U.K.

#### **Service**

Usk House,  
Llantarnam Park,  
Cwmbran, Gwent,  
NP44 3HD,  
U.K.

Tel + 44 (0)727 833271  
Fax + 44 (0)727 843676

Tel + 44 (0)633 868099  
Fax + 44 (0)633 867880  
Other Tel + 44 (0)633 838088

From 16 April 1995

Tel + 44 (0)1727 833271  
Fax + 44 (0)1727 843676

Tel + 44 (0)1633 868099  
Fax + 44 (0)1633 867880  
Other Tel + 44 (0)1633 838088

Stock number 73-365-00.

Issue 1 October 1994.

---